



FTP Server Update Firmware(ftp.icv99.com)


1. Help > About > Firmware Update Setiing > Update Now

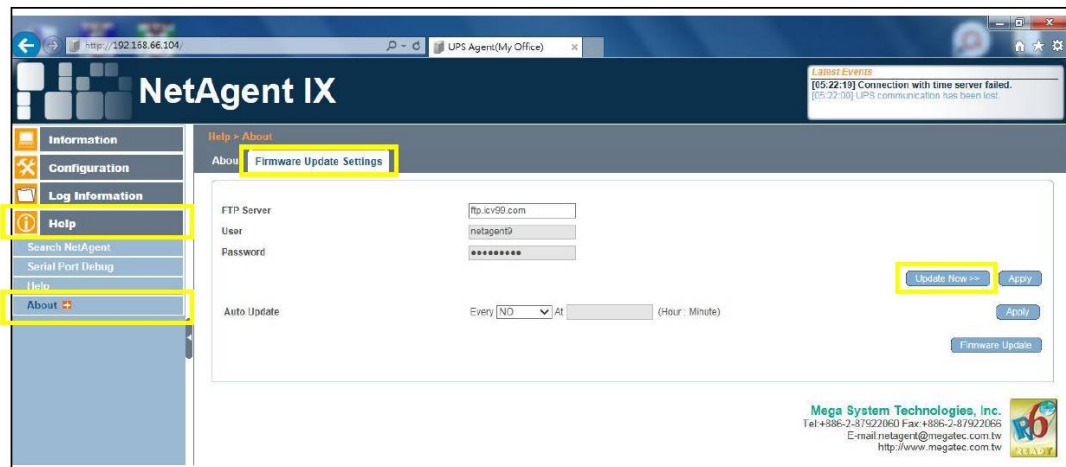


2. Connecting.....

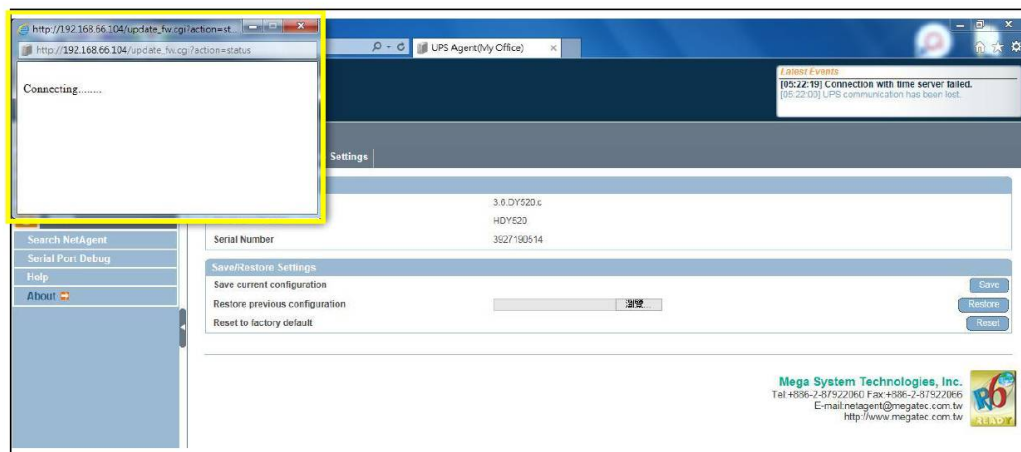


3. Click on Yes to proceed to update firmware

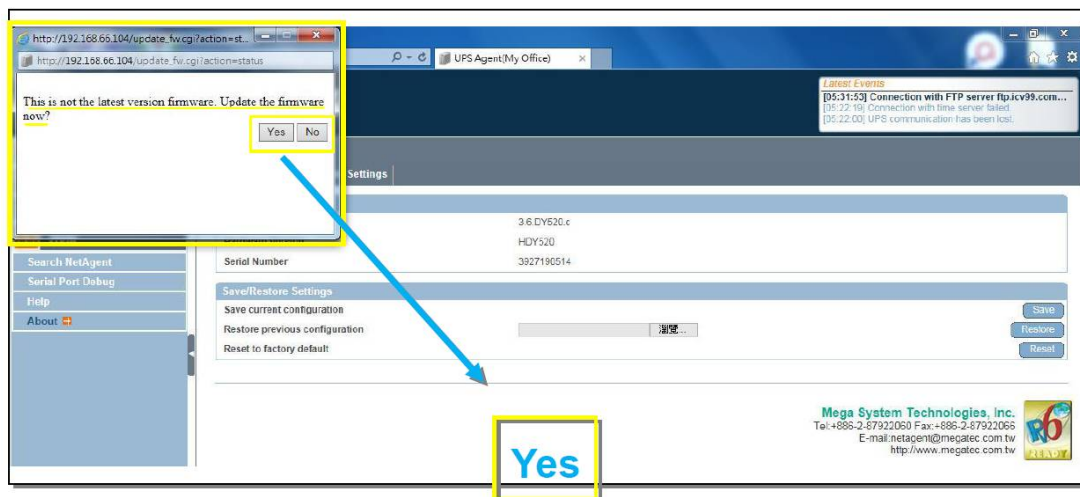


4. Start downloading firmware 0%~100%

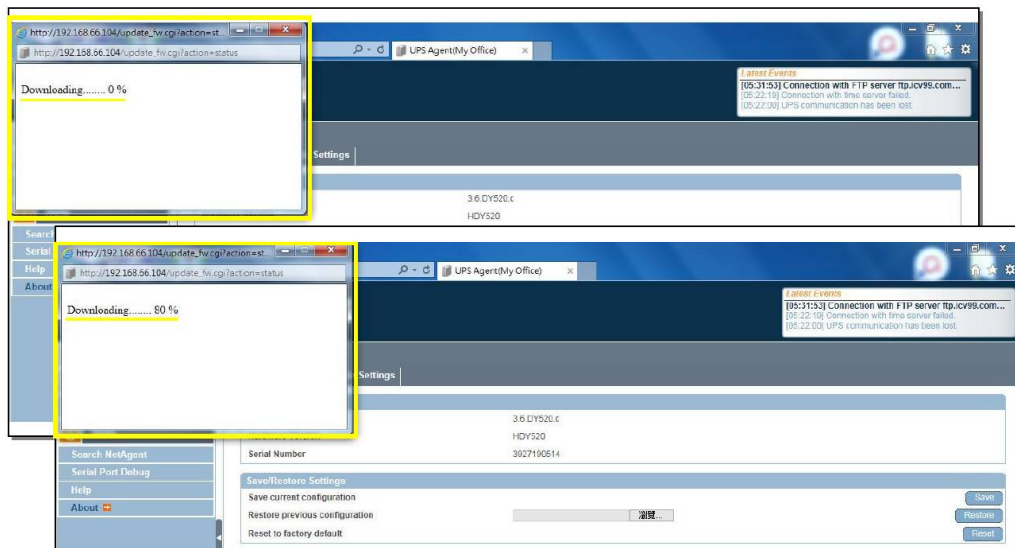

5. Installing.....

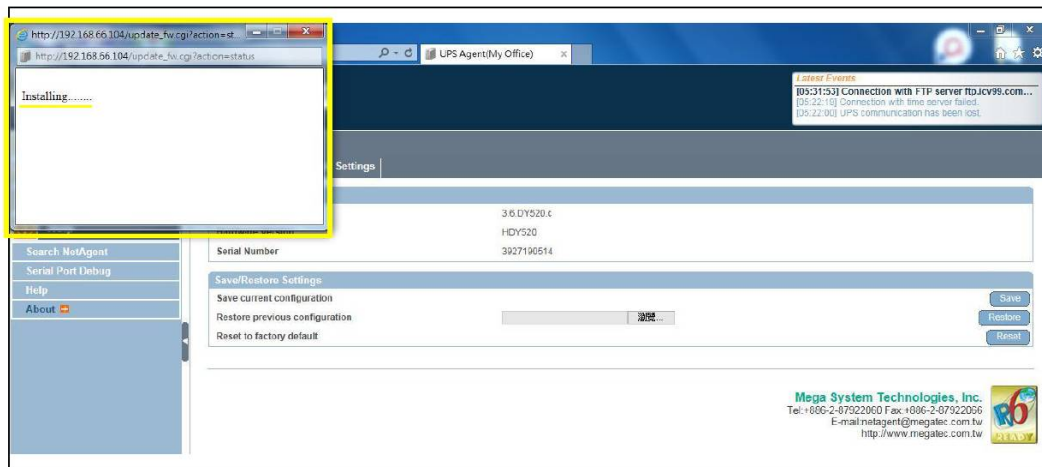

6. Update Complete

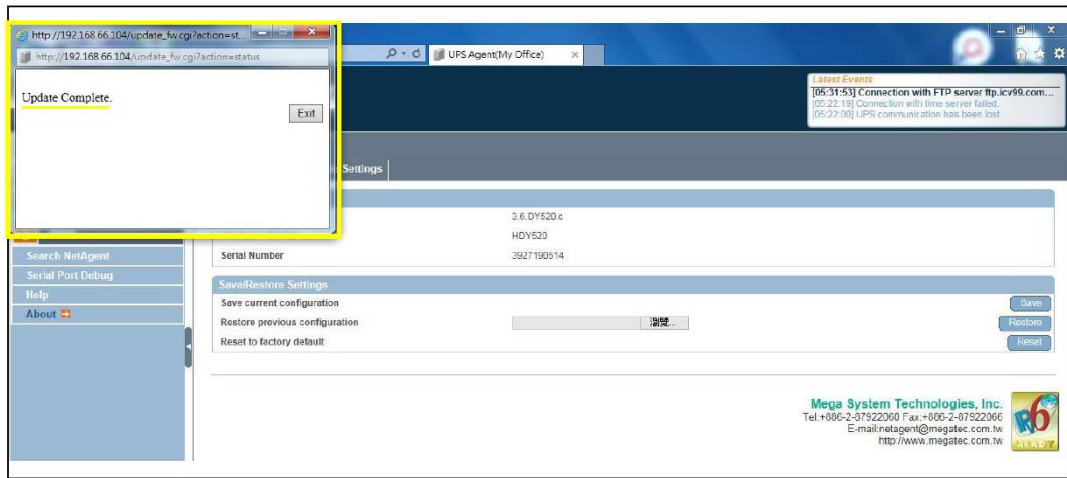

7. Reset to factory default

